

Guida ufficiale sito Teltonika

https://wiki.teltonika-networks.com/view/QSG\_RUT950#Login\_to\_device

INDIRIZZO IP: 192.168.1.1 (da interfaccia web) PASSWORD ROUTER & WIFI: Admin1234

Per accedere all'interfaccia web del router, aprire una pagina browser, digitare l'indirizzo nella barra di ricerca e inserire le credenziali fornite

#### 1- PIN & APN

Cliccare su "Network" -> "Mobile" e inserire nei campi specifici i dati (sia per Sim1 che per Sim2).

<b>(</b> TEL	TONIKA S	Status - No	etwork -	Services -	System -		Logout
rofile in use	e default						FW version: RUT9XX_R_00.06.08.5
General	SIM Management	Network O	perators	Mobile Data Li	imit SMS Limit	SIM Idle Protection	
lobile (	Configuration						
Mobile C	onfiguration						
SIM 1	SIM 2						
		Connection type	QMI 🗸				
		Mode	NAT ¥				
			Passthr	ough and Bridge (	modes are disabled w	hen multiwan is enabled	
		Auto APN					
		APN	- custom		~		
		Custom APN	ogilink vo	dafone.it			
	Authen	ntication method	None 🗸				
		PIN number					
		PUK code					
		MTU	1500				
		Service mode	Automati	• •			
	Der	ny <mark>d</mark> ata roaming					
		Liss IDut only					



# 2- WIFI & PASSWORD

Cliccare su "Network" -> "Wireless"; a questo punto compariranno le reti disponibili, per modifiche cliccare sul bottone "Edit" e cambiare SSID e password (Admin1234 di default) rispettivamente da "General Setup" e "Wireless Security".

	IKA Status	Network	Services -	System -	Logout
Profile in use: defaul	it				FW version: RUT9XX_R_00.06.08.5
Wireless Acc	ess Point				
Here you can configu	ure your wireless setting	s like radio freque	ncy, mode, encryptio	n etc	
Device Configu	ration				
General Setup	Advanced Settings				
	Enable v C	vireless 🗸	~		
Interface Config	guration				
General Setup	Wireless Security	MAC Filter	Advanced Settin	gs	
		SSID RUT950	_E7CA		
	Hid	e SSID			
Back to Ove	rview				Save

# 3- RETE LOCALE & DHCP

Cliccare su "Network" -> "LAN" per cambiare impostazioni classe di rete e DHCP attivo/spento, range e lease time.

TELTON	IKA Status Ne	etwork - Services	System	Logout
Profile in use: defau	lt			FW version: RUT9XX_R_00.06.08.5
LAN				
Configuration				
General Setup	Advanced Settings			
	IP address	192.168.1.1		
	IP netmask	255.255.255.0 ¥		
	IP broadcast			
DHCP Server				
General Setup	Advanced Settings			
	DHCP	Enable V		
	Start	100		
	Limit	150		
	Lease time	12	Hours 🗸	
	Start IP address:	192.168.1.100		
	End IP address:	192.168.1.249		



### 4- FIREWALL

Cliccare su "Network" -> "Firewall"

- Impostare una DMZ dalla schermata "General Settings"
- Configurare apertura delle porte dalla schermata "Port Forwarding"

<b>TELTONIKA</b>	Status -	Network -	Services -	System -		Logout
Profile in use: default					FW version	on: RUT9XX_R_00.06.08.5
General Settings	Port Forwarding	Traffic Rules	Custom Rules	DDOS Prevention	Port Scan Prevention	Helpers
Firewall						
General settings allows yo	ou to set up default fir	ewall policy.				
General Settings						
	Drop invalid pa	ckets				
		Input Reject 🗸				
	0	utput Accept 🗸				
	For	ward Reject 🗸				
DMZ Configuration	-					
	Er	nable				
	DMZ host IP add	dress				

## 5- VPN

Cliccare su "Services" -> "VPN" e selezionare il servizio richiesto per procedere con la configurazione (ad esempio L2TP per ip statico).

CTELTONIKA Status Network Services System Logout												
Profile in use: d	Profile in use: default FW version: RUT9XX_R_00.06.08.5											
OpenVPN	IPsec	GRE Tunnel	PPTP	L2TP	SSTP	Stunnel	DMVPN					
OpenVPN	I											
OpenVPN (	Configura	tion										
Tunnel name			TUN/T	AP		Protoc	ol	Port	Enable			
There are no	openVPN c	onfigurations yet										
Role: Client	✓ New	configuration nar	ne:			Add N	ew					
										Save		



# 6- STATO DI RETE

Cliccare su "Status" -> "Network" per visualizzare le informazioni sullo stato della connessione (banda, cella, tipo di connessione, segnale).

<b>(</b> TEL	TONI	KA	Status	Network	- Serv	vices - S	ystem -		Logout				
Profile in us	e: default								FW version: RUT9XX_R_00.06.08.5				
Mobile	WAN	LAN	Wireless	OpenVPN	VRRP	Topology	Access	WireGuard					
Mobile	Inform	ation											
Mobile	ntl.								SIM card slot in use: SIM 1				
Data conn	ection state	е		Disc	onnected								
IMEI				8604	250410000	)58							
IMSI				2221	016376704	475							
ICCID				8939	8939104520006215332F								
Sim card s	state			Rea	dy								
Signal stre	ength			0 dB	m								
Cell ID				N/A									
Operator				N/A									
Operator s	state			Sear	ching								
Connectio	n type			NOS	ERVICE								
Connecte	d band			N/A									
Bytes rece	eived *			N/A									
Bytes sen	t *			18.7	KB (19174	bytes)							
Reboot m	odem 🕄	Resta	rt connection	C (Re)regi	ster C	discrepancies occu	r.		Refresh C				

#### 7- PASSWORD ADMIN & NOME ROUTER

Cliccare su "System" -> "Administration" per modificare la password di accesso di amministratore e il nome del dispositivo.

<b>(</b> TEL	ΤΟΝΙΚΑ	Status -	Network - S	Services - S	system ∽				Logout				
Profile in use	Profile in use: default FW version: RUT9XX_R_00.06.08.5												
General	Troubleshoot	Backup	Access Control	Diagnostics	MAC Clone	Overview	RMS	Root CA					
Adminis	Administration Settings												
Router N	ame And Host N	ame											
		Router r	name RUT950										
		Host	name Teltonika-RU	F950.com									
Administ	rator Password												
Password ree	quirements: Minimur	n 8 characters	, at least one upperca	ase letter, one low	ercase letter and	one number.							
		Current pass	word	ø									
New password													
	Con	firm new pass	word	ø									